Wyze Camera Settings for Glowforge Timelapse


Set up camera following directions in box

Insert SD card




Open Wyze app and open camera

Open Settings (1) Icon

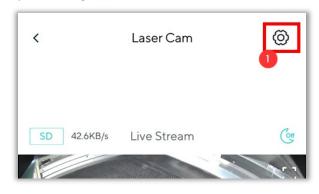


In **Settings** Menu Open **Event Recording** (2)

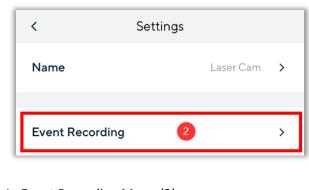


In <u>Event Recording</u> Menu (3)

Detects motion Off **Detects sound** Off

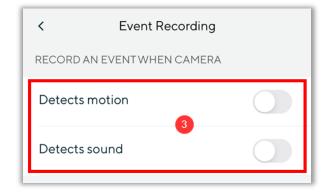

Return **back** one screen

In **Settings** Menu Open **Notifications** (4)

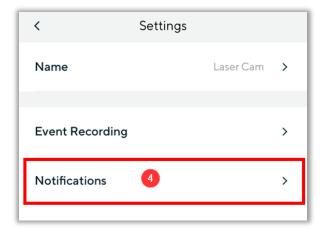


In Notifications Menu



Return **back** one screen


In Settings Menu Open Advanced Settings (6)

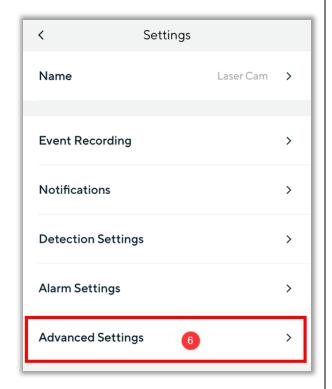

In Advanced Settings Menu


Record to MicroSD Card (7) On
Continuous (8) Selected
Night Vision Mode (9) Off
Camera Status Light (10) Off
Show Timestamp (11) Off
Show Wyze Logo (12) Personal Preference
Record Sound On


Return **back** two screens to view camera

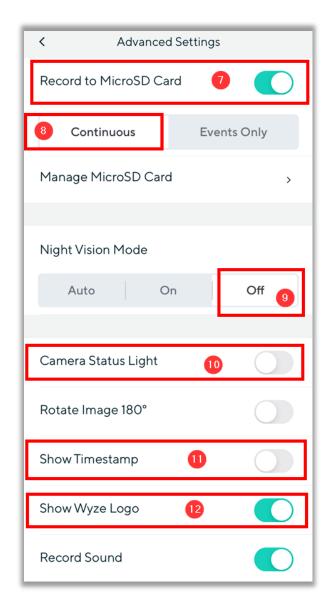


Start Wyze Glowforge Timelapse

Open More menu and open Timelapse

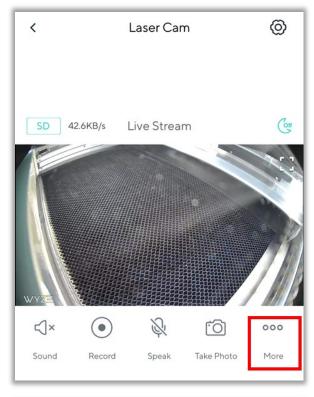

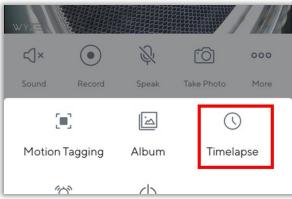

Adjust Interval and select Set

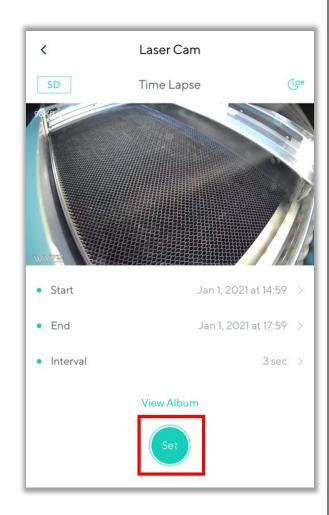


Note: For short jobs, I like the minimum value of 3 seconds.

For jobs running longer than an hour, you may want to adjust this to 5 or 6 seconds

Start Glowforge cut. Timelapse is recording.


You may return **back** one screen while your job runs to watch for flame, or you may close the app entirely

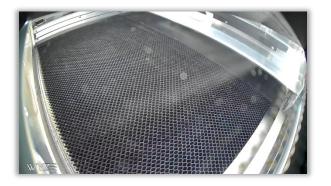


End Wyze Glowforge Timelapse and Retrieve Files


To stop timelapse, open camera, **More**, **Timelapse**

Tap the **stop** button and **Yes** to confirm

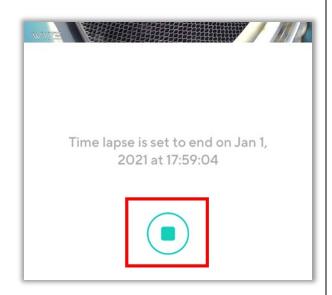


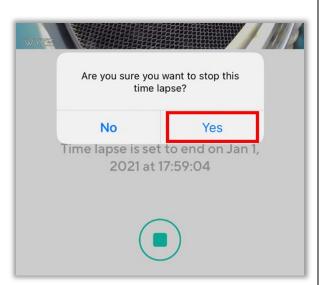

Open **View Album** to see recordings saved on the Wyze camera

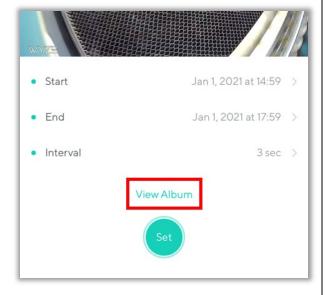

Tap the recording you want and wait for it to sync over wireless to your phone or tablet

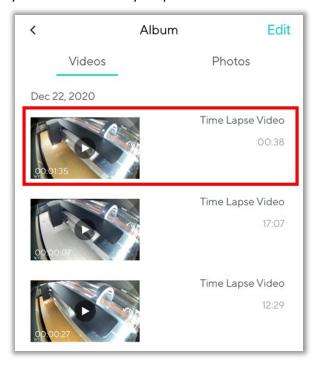

It will save to camera roll on your device where it can be edited and uploaded